

Quick Reference Guide



Turning On/Off

Function:

Turns the Identicom On or Off.

How to use:

Press highlighted buttons simultaneously until you feel a vibration.

On – You will feel one vibration and the Identicom will then go through a symbol, light, vibrate and tone sequence.

Off – You will feel two vibrations.

- Charging Identicom will disable functions on the unit and put it in charge mode. Unplugging it from charge will turn the unit back on.



Status Check

Function:

Check network coverage and battery strength before working alone.

How to use:

Press the highlighted button for two seconds to initiate a check. The LED lights and display symbols will flash red before settling on green, amber or red to indicate network coverage and battery strength (can take up to 20 seconds).

- Do not rely on Identicom if either battery or signal displays red.
- For 877 and 877c, see also GPS Location.



Amber Alert

Function:

Use 'Amber Alert' to pre-record details of your location and/or to initiate an amber timer*.

How to use:

Press the highlighted button until you feel three short vibrations. When the LED lights and display starts to flash, you should commence recording. The display will go solid amber informing you only ten seconds recording time is remaining before the call is ended.

**Check with your employer regarding whether this option is included in your plan, and its exact set-up.*



Red Alert

Function:

Use 'Red Alert' any time you feel your personal safety is being compromised*.

How to use:

Press the highlighted button for two seconds until you feel three short vibrations and the alert symbol is shown. This will mean the 'Red Alert' has been activated and the call is connected. To cancel a 'Red Alert', advise the Alarm Receiving Centre you are safe before pressing the button again until you feel two longer vibrations.

*Check with your employer regarding the exact set up of 'Red Alert'.



Man Down

Function:

'Man Down' detection is used to raise an alert if you have fallen or collapsed - Identicom's two-way audio allows an operator to talk directly to a user*.

How to use:

Identicom will detect a 'Man Down' scenario and go through a pre-alert phase. Moving the Identicom cancels this. If the pre-alert isn't cancelled then a 'Man Down' 'Red Alert' is raised.

- Don't leave unit on and unattended as this may raise a false 'Red Alert'.

** Please check the set-up of 'Man Down' with your employer.*



Rip Alarm

Function:

Raises an automatic 'Red Alert' if the Identicom is forcibly removed from a user when worn on a lanyard.

How to use:

If Identicom is forcefully pulled from the user the device will go into 'Red Alert'.

Please note: Alternatively if you do not want to be discreet in raising a 'Red Alert', you can manually pull the pin out of the device.



GPS Location

Function:

In conjunction with Status Check, use to update your GPS location.

How to use:

Press the highlighted button for two seconds to initiate a Status Check. The LED will flash blue and show a GPS display symbol, before going solid blue with a short vibration when a fix is found – can take up to two minutes.

- GPS location will not work indoors.



Camera Function

Function:

Use to take a job orientated photograph.

How to use:

Press the highlighted button for two seconds to take a photo.

The device will automatically upload it to **@MobileWorkforceManagement** *

- Camera function only available on 877c.
- Not for use in a 'Red Alert'.

*If selected.



Multi-Function Buttons

Function:


Each button can be defined to make an audio call or to trigger an SMS text message to a pre-defined contact*.

How to use:

Press one of the highlighted buttons, specific to each contact to call or trigger an SMS text*. The blue LED will flash during a call. Press the button again to cancel the call.

- Multi-Function Buttons are not for use in an alarm situation.

* Check with your employer regarding the exact set up.

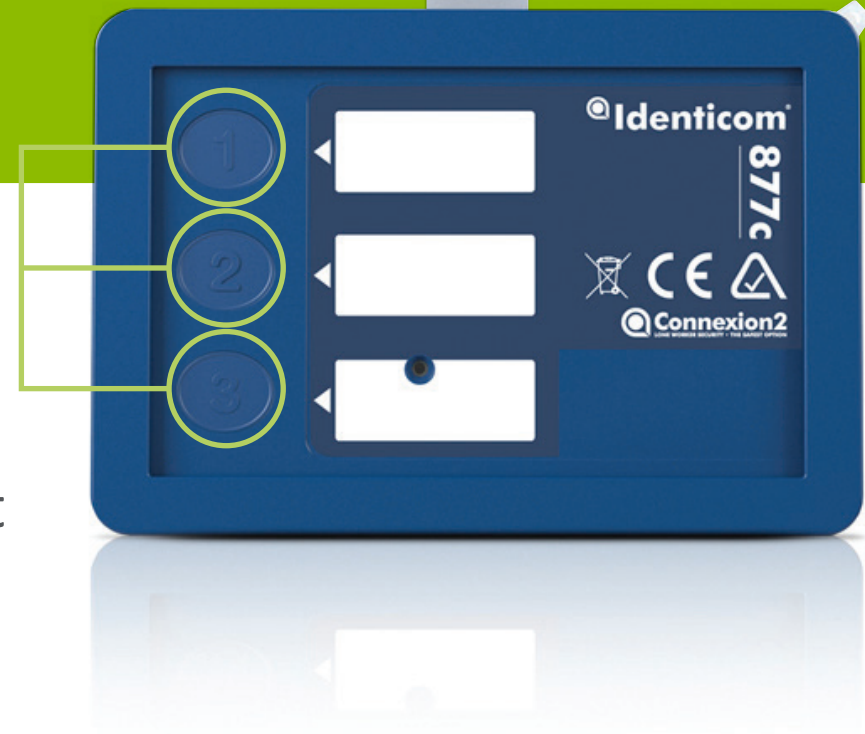

Charging

Function:

Keep's the Identicom battery fully charged.

How to use:

Insert the Identicom charger lead into the indicated micro USB socket. The battery symbol and LED will start to flash. When fully charged the battery symbol will show full and the LED will display a constant green light.

- Minimum two hours charging required to reach full charge.



Essential Care and Maintenance

- Regularly use the Status Check function. It will display two alternating red flashing lights if there is a problem.
- Keep your Identicom clean and avoid unnecessary knocks or drops.
- Identicom is not waterproof; avoid exposure to rain or other wet conditions.
- If you wear your Identicom on a lanyard, remember to check the lanyard plug regularly and replace it whenever it becomes damaged.
- Charge your Identicom every 24 hours if possible.



Tel: 0114 399 6000 (Option 4)

E: support@soloprotect.com

Twitter: [@SoloPSupport](https://twitter.com/SoloPSupport)

www.SoloProtect.com/uk